Table B. ADAPTER SUFFIX LETTERS for North American Burners ①

4211 D	4682H	5514 D	6736B
4213 D	4683B	5795 D	6758B
4225 D		5796B	6795D
4343	4723 8838-E <sup>③</sup>	5819G②	0773
4422-2 thru -6B	4724 (Obsolete) 8838-E <sup>③</sup>		6819G②
4422-7-A thru -8-AA	4725 8838-E <sup>③</sup>	6421B	6820G②
4423, 4424B	4726C	6422-2 thru -6B	6821B
	4762B	6422-7-A thru -8-AA	6825F②
4425-2 thru -6B	4777H⑥	6423B	6832B
4425-7-A thru -8-AA	4795 D	6425-2 thru -6B	6833B
4431-8-AB	4796B		6836B
4441, 4442, 4442AA		6425-7-A thru -8-AA	6841B
4445-2 thru -4C	4808B	6427-8-AB	6843B
4452A	4818G②	6435B <sup>(4)</sup>	6855B
4485C	4819G②	6514 D	
	4821B	6520 D	
4514D	4825F②		
4545-6 thru -8D	4828B	6521 D	
4545-9 FR onlyL	4831B	6526B	
4558/4558VB	4832, 4833, 4836B	6527-7A	
	4841B	6562 (Obsolete)H	
4630 w/4630-PJ		6570 PilotB	
4630 w/4021-15 or -16M	5422-2 thru -6B	6570 Main FlameD	
4659B	5422-7-A thru -8-AA	6575B	

Adapters do not include detectors--order separately.

## ADDITONAL SPECIAL UV ADAPTERS

## 4-27091-1 14mm X 1/2" NPT Adapter


This adapter is made from steel, and screws into a 14mm spark plug hole to provide a  $\frac{1}{2}$ " male NPT fitting for mounting  $\frac{1}{2}$ " UV sensors. A 14mm spark plug style gasket R290-3510 can be purchased separately.

## 4-32740-1 1" X 1/2" NPT UV Swivel Adapter

This swivel adapter allows a UV sensor to be aimed and secured up to 10° off the mounting centerline. The base of the adapter is steel, while the swivel and compression nut are made from brass. The back of the swivel connection has a ½" pipe thread for attaching a sight tube if required. This style of adapter is included in all 4419/6419 burners for mounting the UV sensor.

**R590-0280** 1" NPT female x ½ "NPT male adapter **R590-0281** 1" NPT female x ¾" NPT male adapter

These adapters are intended to allow  $\frac{1}{2}$ " or  $\frac{3}{4}$ " UV cells with female connections to attach to the 8833-R. They are made from brass.

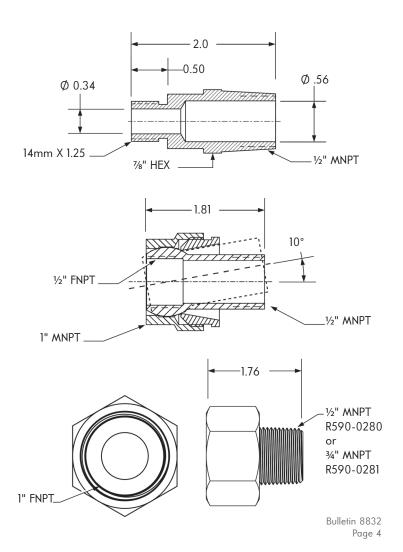

<sup>2</sup> Use C7035A UV only with 8837-F or -G Adapter because of ambient temperature considerations. Adapter includes Honeywell Heat Block.

<sup>3</sup> Or Series R. Also, R can be used in place of any A or B.

<sup>(4)</sup> When flame supervision is mounted, Sensitrol<sup>TM</sup> Oil Valve cannot be close-coupled because of interference with handle.

<sup>©</sup> See Sheet 4343-3 for TwinBed® II flame detector assemblies.

<sup>©</sup> Requires modified version of adapter shown in Fig 1, page 3. Use adapter 4-6153-1