


Wiring and Dimensions | 8351 Furnace Pressure Controller

WIRING DIAGRAM

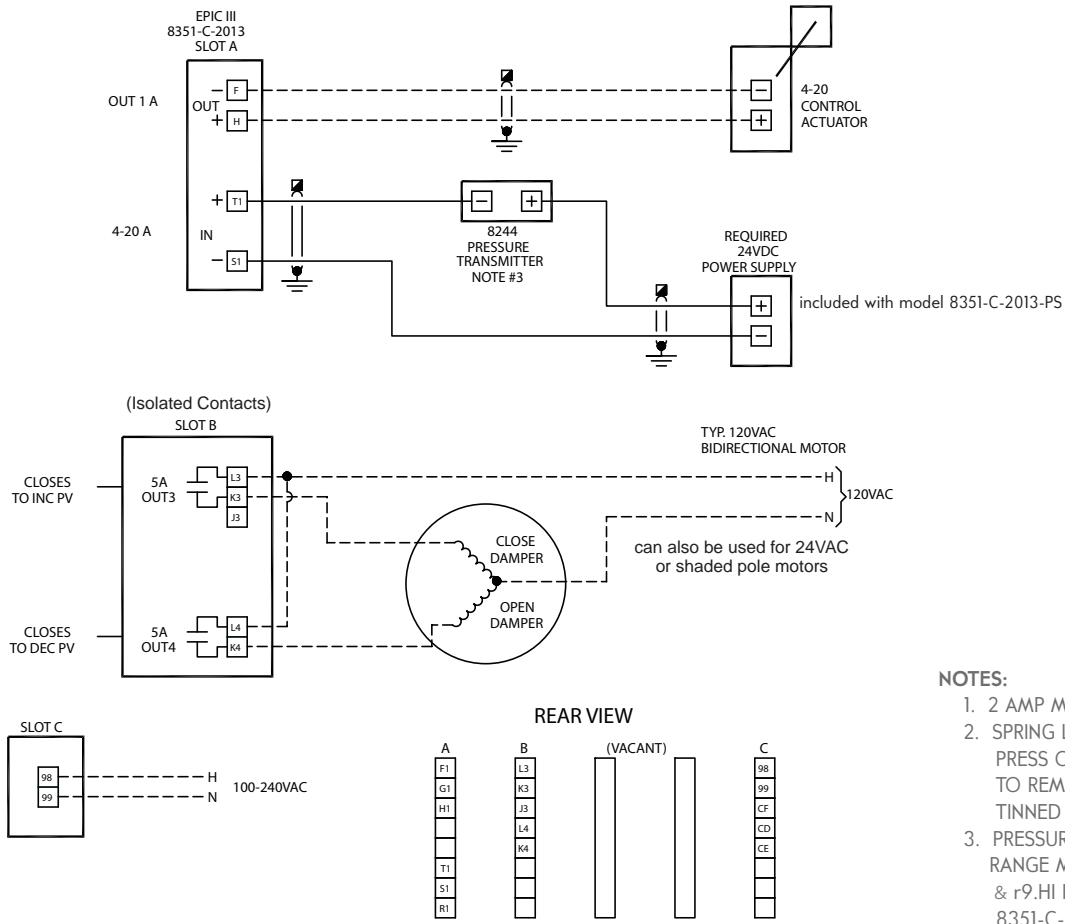

NOTES:

1. 2 AMP MAX. LOAD
2. SPRING LOCK WIRE TERMINALS. PRESS ORANGE RELEASE TAB TO REMOVE WIRE. SOLID OR TINNED WIRE IS RECOMMENDED.
3. PRESSURE TRANSMITTER RANGE MUST AGREE WITH r9.LO & r9.HI PARAMETER SETTERS IN 8351-C-2013.

DIMENSIONS SHOWN ARE SUBJECT TO CHANGE. PLEASE OBTAIN CERTIFIED PRINTS FROM FIVES NORTH AMERICAN COMBUSTION, INC. IF SPACE LIMITATIONS OR OTHER CONSIDERATIONS MAKE EXACT DIMENSION(S) CRITICAL.

WARNING: Situations dangerous to personnel and property may exist with the operation and maintenance of any combustion equipment. The presence of fuels, oxidants, hot and cold combustion products, hot surfaces, electrical power in control and ignition circuits, etc., are inherent with any combustion application. Components in combustion systems may exceed 160°F (71°C) surface temperatures and present hot surface contact hazard. Fives North American Combustion, Inc. suggests the use of combustion systems that are in compliance with all Safety Codes, Standards, Regulations and Directives; and care in operation.

CONTACT

fna.sales@fivesgroup.com

T +1 800 626 3477 - F +1 216 373 4237

Fives North American Combustion, Inc.
4455 East 71st Street - Cleveland, OH 44105 - USA
www.fivesgroup.com


fives
Industry can do it