


HERMETIC

DATA PLATE
LOCATION
6 & 9 CYLINDER
COMPRESSOR

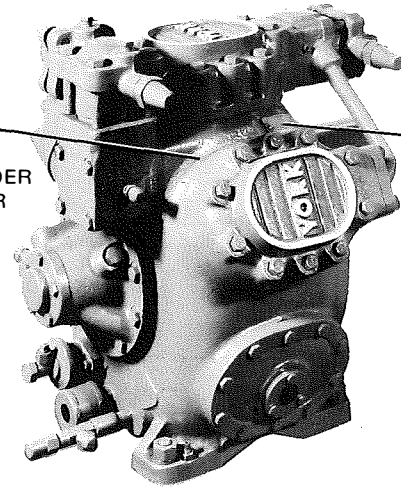

OPEN

DATA PLATE
LOCATION
3 CYLINDER
COMPRESSOR

FIG. 1 – COMPRESSOR DATA PLATE LOCATION

TABLE 1 – COMPRESSOR MODEL NUMBER CROSS REFERENCE AND REPLACEMENT LIST

Model Numbers	Type	No. of Cylinders	No. of Active Cylinders	Replacement	
H103, H32SL, HS32L	HERMETIC	3	3	SS42 – See Form 180.40-RP1	
H153, H32SM, HS32M		3	3		
HS256 ¹ , H51S ¹		6	5 ²	SS42 – See Form 180.40-RP1	
H256 ¹ , H61S ¹		6	6	SS62 – See Form 180.40-RP1	
H206, H306, H62S, HS62		6	6	SS62 – See Form 180.40-RP1	
H309, H459, H92S, HS92		9	9	SS82 – See Form 180.40-RP1	
(A) or (B) F235B, BFX235B (A) or (B) F236B, BFX237B (A) or (B) F239(B) or (D), BFX238B BFX239(B) or (D) F32S, FS32	OPEN	3	3	465-16740 ³	
(A) or (B) F266B, BFX266B (A) or (B) F267B, BFX267B (A) or (B) F269(B) or (D), BFX268B BFX269(B) or (D) F62S, FS62		6	6		465-16741 ³
(A) or (B) F297B, (A) or (B) F298B (A) or (B) F299(B) or (D), BFX299D F92S, FS92		9	9		

¹ 1-7/8" stroke, all others are 2-1/4" stroke.

² Suction valve removed from one cylinder.

³ Compressor, Bare with Discharge Manifold, Stop Valves, Suction Pressure Actuated Capacity Control, Oil Charge and Crankcase Heater, Less Base and Oil Failure Switch.